
Brush and Plush (felt) Replacement Parts

Cassette Tray

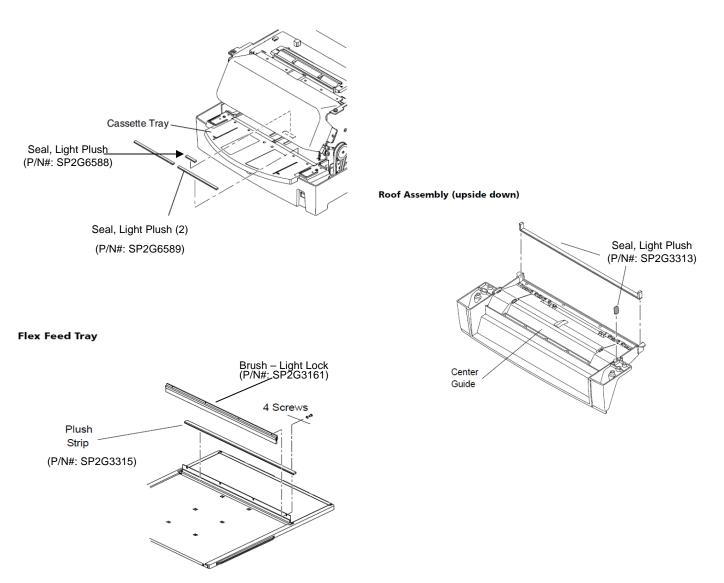

		Qty
Part #	Description	Required
SP2G3161 (replacement for SP2G3160)	Brush - Light Lock, Flex Feed Tray	1
SP2G3313 * (replacement for SP2G6062)	Seal - Light Plush	6
SP2G3315 * (replacement for SP2G6063)	Seal - Light Plush	1
SP2G6589 *	Seal - Light Plush	2
SP2G6588 *	Seal - Light Plush	1

Parts denoted by an (*) are only available as part of the Preventative Maintenance Kit P/N#: SP2G7712.